


▶ Turn off public mode

 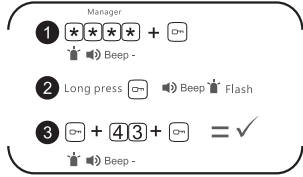


1. Input management password+ **[Enter]**, buzzer gives out a long beep, the green light **[Green Light]** is on,
2. Press **[Enter]** at least 2s, the green light **[Green Light]** flash, press **[Enter]** again,
3. Input *4 3+ **[Enter]** ", when you heard a long beep, means public mode already been turned off.

Note:

- This setting must use the management password, the user password is locked.
- Switch to private mode by default after the public mode is disabled.

Turn on/off Fake Pin code function



1. Input management password+ **[Enter]**, buzzer gives out a long beep, the green light **[Green Light]** is on,
2. Press **[Enter]** at least 2s, the green light **[Green Light]** flash, press **[Enter]** again,
3. ▶Input *4 2+ **[Enter]** ", when you heard a long beep, means Fake Pin code function already been turned on;
▶Input *4 1+ **[Enter]** ", when you heard a long beep, means Fake Pin code function already been turned off.

Note:

- Introduced with Anti-Theft Technology and Fake PIN password function you can input any code(s) before or after the real password to prevent the real password being peeped. Maximum 16 digits.


Special function description

1. Decode
 - When password been forgotten, you can get the decode number by calling service number(18989359221). The password will be changed back to the original management password "4321", user password "1234". Clear code/clear fingerprint unlock, do not restore mode.
 - When the user forgets the password, the agent uses the TypeC-Key decoder of our company to decode, and the management password is restored to 4321, the user password is restored to 1234; Clear code/clear fingerprint unlock, do not restore mode.
 - Press "RST" on the back of the control panel for 3s , when you heard a long beep sound , password restore to factory settings; Clear code/clear fingerprint without unlock, do not restore mode.
2. Auto-alarm will be activated when input wrong password 4 times and the lock will be died for 60s.
3. Battery low voltage prompts
When the buzzer gives out beep, and the red light is on, means battery at low voltage, please place the battery in time, the lock may not work when the voltage is low.
4. Emergency power supply
When the battery is in low voltage condition, you can connect the Type-C interface with an external power supply. _____ 5 _____

5. Tone/Mute mode switching (loop switching)
Press and hold the **[Enter]**, and the green light flash once to enable the silent mode; In silent mode, hold down the **[Enter]** and a long beep to disable the silent mode.

Fixing hole size & installation

- ▼ Fixing hole size
Unit: mm

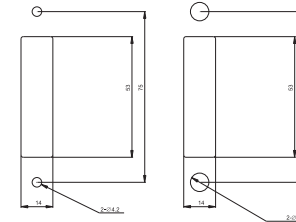


Wooden hole size Steel hole size

(1)

▶ Installation

- *Thickness range of the wooden door: 15mm-25mm
- *Thickness range of the metal door: 0.6mm-2mm

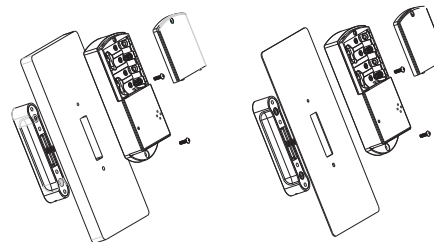


Wooden mounting Steel mounting

(2)

IPSA BUSINESS INDIA PVT. LTD.


57/1/17-18, Site - 4, Industrial Area, Sahibabad, Ghaziabad, Uttar Pradesh - 201010 INDIA.
Web : www.ipsaindia.com | E-mail : customercare@ipsaindia.com
Phone : +91 85050 10101

_____ 6 _____

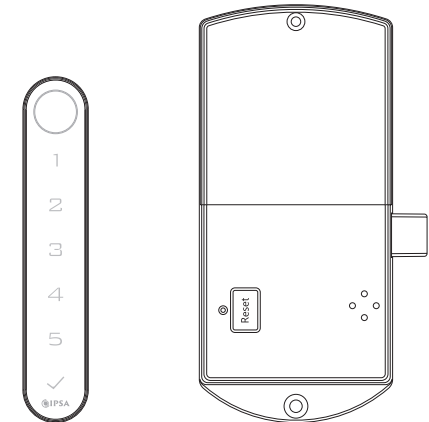

CDL07 Cabinet Digital Lock User Manual

Product introduction

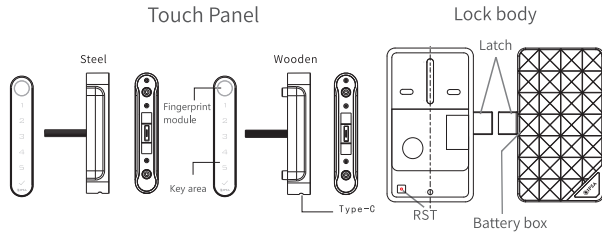


Technical parameters

Fingerprint device	Semiconductor fingerprint reader	Management fingerprint	2
User password	1234	User fingerprint	8
Management password	4321	Static current	<50uA
Working temperature	-20 ~ +55°C	Dynamic current	<120mA
Storage temperature	-40 ~ +55°C	Batteries life time	≥5000
Working humidity	10% ~ 85% RH	Power supply	4×AA Alkaline battery

How to operate

- Factory default user password 1234, factory default management password 4321; factory default fingerprint database is empty, any fingerprint can open the lock under the private mode.
- The lock fingerprint input has 2 types: management fingerprint and user fingerprint. Unlock permission: manage fingerprints > user fingerprint.
- This lock has 2 kinds of mode, one is private mode, and the other one is public mode. Under the public mode, it can only set up temporary password, can not set up temporary fingerprint. Factory default mode is private mode.

Lock & Unlock

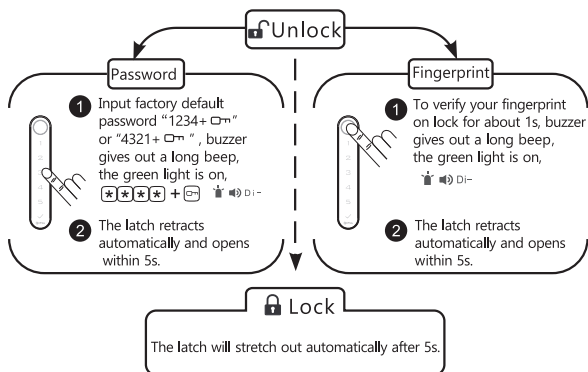


Note:

- Wrong: buzzer gives out beep
- Buzzer gives out beep, and the red light is on, means low voltage,
- After using the management password to unlock, the user password will be changed back to 1234.

Setting password

- Change the password (For example, change the factory user password "1234" to "123123")

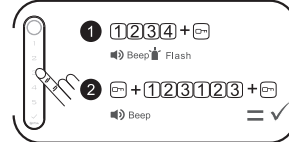


- Input current password "1234+Enter", buzzer gives out a long beep, the green light flashes quickly,
- Press Enter again until the green light flashes quickly,
- Input new password "123123+Enter", when you heard a long beep, means password already been changed.

Note:

- Master password change follow the same steps.
- New password consists 4-15 digits, master password cannot be as same as user password.
- Sound beep 3times, it means wrong operation.

Setting fingerprint

【1】 How to add the management fingerprint

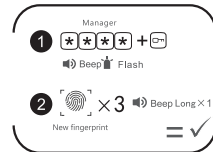

- Input correct management password "****+Enter", when you heard a long beep, press and hold the Enter until the green light flashes quickly,
- To put the fingerprint on the lock for 3 times, each time you will hear a short beep, means inputting fingerprint succeed, if you hear three short beep, means failed. Then change position of fingerprint and press 3 times successfully, a long beep, means setting management fingerprint succeed. (2 at most)

Note:

- Management fingerprint have add and delete user fingerprint function.
- Under public mode, management fingerprint can also delete the temporary password.

【2】 How to add the user fingerprint




- To put the management fingerprint on the lock for about 1s, you will hear a long beep with the green light is on,
- Again put the management fingerprint on the lock for about 1s, you will hear a long beep with green light flashes, now you are ready to add user fingerprint,
- To put the user fingerprint on the lock for 3 times, each time you will hear a short beep, means management fingerprint setting succeed, if you hear three short beep, means failed. Then change position of fingerprint and press 3 times, a long beep alarm, means succeed. (8 at most)

Note:

- Under the public mode, user fingerprint is unworkable.
- Management fingerprint and user fingerprint can not be the same.

【3】 How to delete all fingerprint

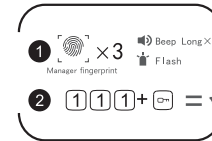

- To put the management fingerprint on the lock for 3 times, the red light flashes,
- Input "111+Enter", when you heard a long beep, delete succeed.




Note:

- None manage fingerprints delete a single fingerprint.

How to switch the mode

▶ Turn on public mode

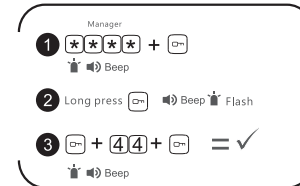


- Input management password+Enter, buzzer gives out a long beep, the green light is on,
- Press Enter at least 2s, the green light flashes, press Enter again,
- Input "44+Enter", when you heard a long beep, means public mode already been set.

Note:

- The management fingerprint and user fingerprint recorded in the public/private mode are invalid after the mode conversion. You need to record the fingerprint again.
- Management fingerprint in both public and private mode can unlock.

▶ Set temporary password (No temporary fingerprint function)

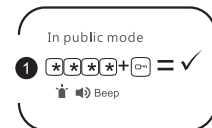

- Input the new password consisted of 4-15 digits,
- Press Enter, when you heard a long beep, the green light is on, temporary password already been set.

Note:

- In public mode, if the temporary password is valid, use the management password or management fingerprint to clear the temporary password.
- Temporary password can be used for 1 time only.
- Flash one time every 3s means the lock has already been taken.

